


ZAPI SMART CONSOLE

Introduction for WPT45

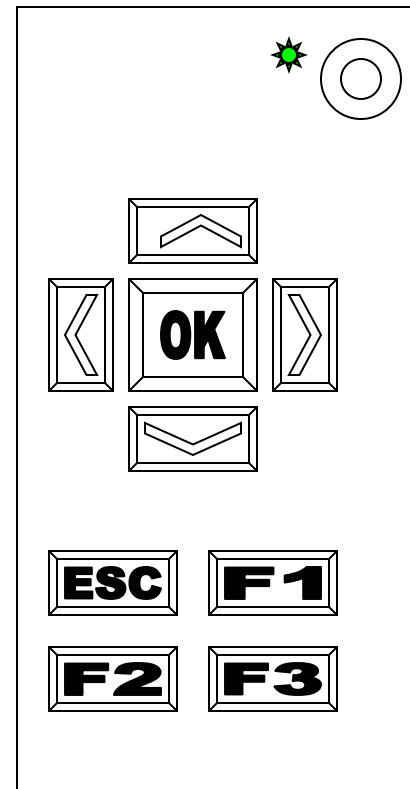

Location of Controller Socket



Traction VACC

Key on the truck, connect the flash connecting line. The Display will show:


Press  or  button until RS232 CONSOLE shows on the display

The Display will show :


Press OK to go into the Traction Menu

The Display will show:

Cons AFG ZP021*

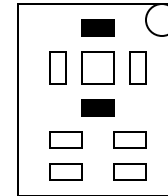


Cons AFG ZP021*
RS232 CONSOLE

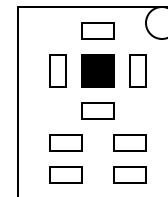

ACOT2SE4 CI2.33
24V 150A 0H

Press OK to go into the Main Menu

 
The Display will show:

Press  or  button until PROGRAM VACC shows on the display


The Display will show:

Press OK to go into the PROGRAM VACC function


The Display will show the minimum and maximum throttle voltage values. Both directions will be shown

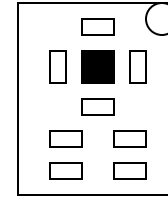

Main Menu

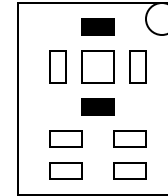


MAIN MENU
PROGRAM VACC

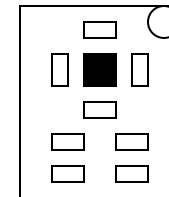

VACC SETTING
CURRENT VALUE

Press OK to clear these values.
Display will show 0.0

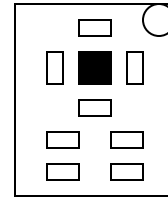

The display will show:


FORWARD x.xV x.xV
BACKWARD x.xV x.xV

Slowly depress the accelerator forward to its maximum value. The new minimum and maximum voltages will be displayed on the Console plus an arrow indicating the direction.



Repeat step for reverse direction

When finished , press ESC

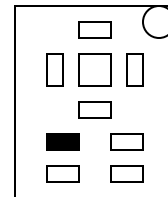


The Display will ask : APPLY CHANGES ?

Press OK for yes

When finished, the Console shows :

Press and hold power button for 3s to turn off the Console

APPLY CHANGES?
YES= OK NO=ESC

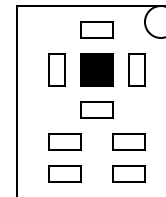

Main Menu

