

## VACC Calibration for V08

- 1 CONNECT THE ZAPI HANDSET TO THE EPS CONTROLLER (LOWER ONE) & TURN THE KEY ON



- 2 PRESS THE ROLL UP & PARAMETER UP ARROWS SIMULTANEOUSLY



- 3 CONFIG. MENU SET MODEL WILL DISPLAY THE PRESS THE ENTER BUTTON



- 4 YOU WILL BE CONNECTED TO NODE 6 AND NEED TO CONNECT TO NODE 2



**VACC Calibration for V08**

5 PRESS THE PARAMETER DOWN ARROW TILL THE DISPLAY READS CONNECTED TO 2.



6a PRESS THE ENTER BUTTON, NEXT PRESS THE OUT BUTTON  
( ZAPI DISPLAY Reads ARE YOU SURE?)  
PRESS ENTER AGAIN



6b PRESS THE OUT BUTTON

7 **ADXxxx** SHOULD APPEAR IN THE DIPLAY  
(You are now connected to the Drive / Lift Controller)



### VACC Calibration for V08

- 8 PRESS THE ROLL UP & ENTER BUTTONS SIMULTANIOUSLY




- 9 MAIN MENU PARAMETER CHANGE WILL APPEAR, USE THE LEFT ROLL UP ARROW ^ TO GET TO THE PROGRAMM VACC MENU.



- 10 PRESS THE ENTER BUTTON WHEN YOU GET THE VACC MENU




- 11 PRESS THE ENTER BUTTON THE CURRENT SETTINGS WILL APPEAR

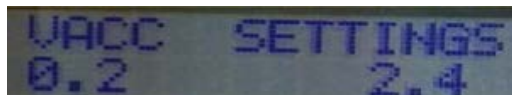

PRESS AND HOLD THE ENTER BUTTON SO IT CLEARS

- 12 THE VALUES TO ZERO

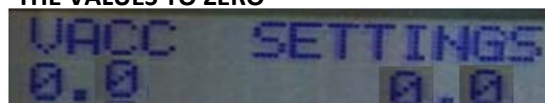


### VACC Calibration for V08

- 13 PUT THE DIRECTION SELECTOR IN FORWARD  
THE DEPRESS THE ACCELERATOR AND HOLD  
IT TO THE FLOOR.

**DO NOT LET IT GO UNTIL YOU GO FINISH THE  
NEXT STEP!!!**



- 14 PRESS THE ENTERBUTTON (1ST)(NOW YOU CAN RELEASE THE  
ACCELERATOR) THEN THE OUT BUTTON (2ND).

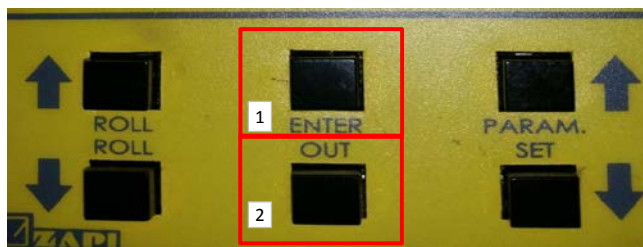

CYCLE THE KEY SWITCH OFF AND ON THIS WILL SAVE  
THE NEW SETTINGS